

**ANT-DIST**

**UHF**



USER'S MANUAL

# **ANY SPOT**

**WIRELESS MICROPHONES**



MAKERS OF THE ORIGINAL  
HOT SPOT PERSONAL MONITOR


# ANT-DIST Features:

## Front Panel:



Power Switch

## Rear Panel:

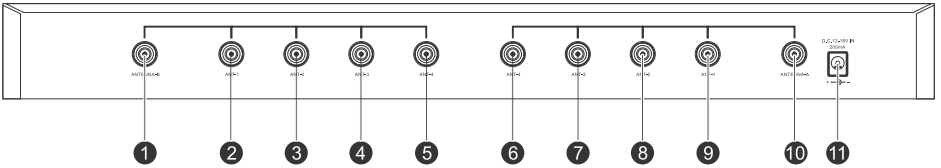


- ① Antenna jack B (D.C.9V available) 50ohm
- ② B channel antenna output jack 1
- ③ B channel antenna output jack 2
- ④ B channel antenna output jack 3
- ⑤ B channel antenna output jack 4
- ⑥ A channel antenna output jack 4
- ⑦ A channel antenna output jack 3
- ⑧ A channel antenna output jack 2
- ⑨ A channel antenna output jack 1
- ⑩ Antenna jack A (D.C.9V available) 50ohm
- ⑪ DC Power Input Jack


## ANT-DIST

Antenna Input Impedance	50 ohm
Antenna Output Impedance	50 ohm
Antenna Input Receptacle	BNC
Antenna Output Receptacle	BNC
Gain	3dB
Bandwidth	100MHz
Power Requirements	DC 12~18V 100mA
Dimensions	45mm H*410mm L*160mm W

## ANT-DIST Connections

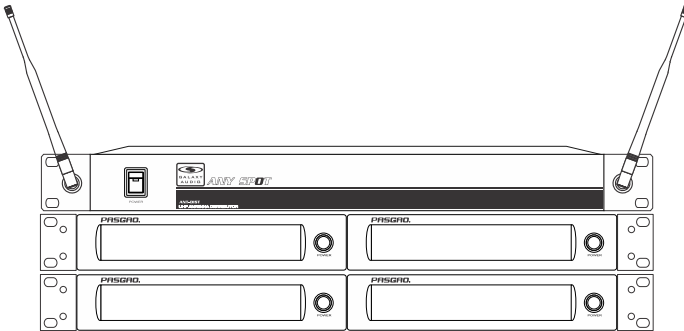

Shown with Four Receivers  
(Optional)

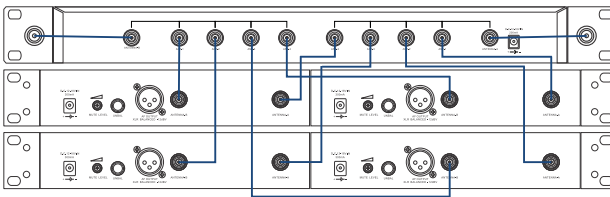

## Accessories


AS-BNC 50 connecting cable



AS-BNC connector (optional)



Rack Ears

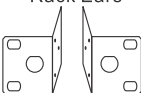

# LIMITED WARRANTY

Please visit [galaxyaudio.com](http://galaxyaudio.com) for the latest updates  
Specifications in this manual are subject to change without notice.