DHX

#### GALAXY AUDIO

#### Wireless Microphone System

#### Included Components

- **1.** DHXR x1
- 2. Rack Ears x2
- 3. Coupler Half x1
- 4. Antennas x2
- 5. 1/4" to 1/4" Audio Cable x1
- 6. Power Supply x1
- 7. Rack Ear Screws x6
- 8. Coupler Screws x2
- 9. Antenna Plugs x2
- 10. Quick Start Guide x1

# 3. 4. 5. 5. 6. 7. 1. 8. 1 9. 1 1

## OALAXY AUDIO

#### Optional Accessories

- 1. HH65SC Handheld Mic
- 2. HH65 Handheld Mic
- 3. MBP77 Body Pack
- 4. LV-U3BK Lav Mic
- 5. AS-GTR Guitar Cable
- 6. HS-U3BK Headset Mic
- 7. SM-W77 Wireless Shockmount Base



## What May be Needed to Rack (Not Included)

- **1.** Rack Screws 10/32 x .75", Phillips Truss Head Screws
- **2.** #2 Phillips Head Screwdriver



#### Setup



Insert the 5.5mm plug into the DC input jack, plug the wall wart into a 120VAC outlet.



Individual Output: Connect a shielded microphone cable to the channel's XLRM output, connect the other end into your mixer input.



Combined Outputs-1/4": Connect one end of a shielded 1/4"M to 1/4"M cable, to the 1/4" Mix output, connect the other end into your system input.



Attach the antennas to the antenna jacks

#### Single Rack Mounting (Optional)



Attach the long and short rack ears to either side of choice using the provided screws. Align and screw into the rack.

#### **Dual Rack Mounting (Optional)**



Screw one short rack ear on the left side of the first receiver, and one coupler half onto the right side of the same receiver using the provided screws.



Screw one short rack ear on the right side of the second receiver, and one coupler half onto the left side of the same receiver.



Align both receivers so that the coupler halves fit, and screw them together.



Align the dual receivers to the rack and screw into the rack.

#### Operation



Power on the receiver



Press the "SET" button twice, the group number will flash, use the up and down buttons to select a group.



Press set again, the channel number will flash, use the up down buttons to select a channel.



With the transmitter turned on, place the transmitter with it's IR window (figure 4a) facing the receiver IR window (figure 4b), about 6" away. Press the ADS button on channel 1. This will sync the Transmitter to the Receiver.











#### **Quick Start Guide**



### BE HEARD

#### **Other Helpful Sources**



DHX Cutsheet (PDF Download) DHX Manual (PDF Download)

How To Video

Specifications subject to change without notice.

601 E. Pawnee Wichita, KS 67211 316. 263.2852 FAX 316.263.0642 www.galaxyaudio.com

Distributed in Canada by **Audio Distributors International (ADI)** 1275 Newton, unit 6 Boucherville, QC J4B 5H2 Canada 450.449.8177 FAX 450.449.8180

DHX

Printed in China V20160504

#### **FAQ**

- 1. Q. I'm having problems finding the best frequency for me. Where do I go to find this information?
- A. Please consult the online manual or visit: GalaxyAudio.com/support/schematics-and-frequency-charts
- 2. Q. I only have 1 coupler half, why only 1 and what is it used for?
- A. The coupler is used for racking two DHXR receivers into the same rack space. If you buy a 2nd DHX system, you receive the other coupler half with it..
- 3. Q. How do I use the Scan function?
- A. Consult the online manual for detailed instructions at: GalaxyAudio.com/assets/uploads/product-files/DHX-Manual.pdf