

1. Adjust the 16 position by pressing the up or down arrows on the top of the SM-W77 base to change the frequency.
2. Use the chart to set up the DHXR Group & Channel to the frequency that corresponds to the SM-77 base.
3. Once the Group & Channel of the receiver is set, press the gray button on the top of the SM-77 base to turn the microphone on.

1. Adjust the 16 position by pressing the up or down arrows on the top of the SM-W77 base to change the frequency.
2. Use the chart to set up the DHXR Group & Channel to the frequency that corresponds to the SM-77 base.
3. Once the Group & Channel of the receiver is set, press the gray button on the top of the SM-77 base to turn the microphone on.

CODE D Frequency Chart



SW-W77D 16 Positions	DHX Group	DHX Channel
1 ~ 584.400 Mhz	1	1
2 ~ 587.500 Mhz	1	2
3 ~ 589.575 Mhz	1	3
4 ~ 591.050 Mhz	1	4
5 ~ 593.425 Mhz	1	5
6 ~ 595.200 Mhz	1	6
7 ~ 598.450 Mhz	1	7
8 ~ 599.650 Mhz	1	8
9 ~ 601.275 Mhz	1	9
10 ~ 603.775 Mhz	1	10
11 ~ 605.500 Mhz	1	11
12 ~ 606.750 MHz	1	12
13 ~ 601.575 Mhz	7	9
14 ~ 602.250 Mhz	6	8
15 ~ 607.600 Mhz	2	12
16 ~ 607.875 Mhz	9	12



CODE L Frequency Chart

SW-W77L 16 Positions	DHX Group	DHX Channel
1 ~ 655.400 Mhz	1	1
2 ~ 656.550 Mhz	8	1
3 ~ 657.225 Mhz	5	2
4 ~ 658.500 Mhz	1	2
5 ~ 660.575 Mhz	1	3
6 ~ 662.050 Mhz	1	4
7 ~ 664.425 Mhz	1	5
8 ~ 666.200 Mhz	1	6
9 ~ 669.450 Mhz	1	7
10 ~ 670.650 Mhz	1	8
11 ~ 672.275 Mhz	1	9
12 ~ 674.775 MHz	1	10
13 ~ 676.500 Mhz	1	11
14 ~ 677.750 Mhz	1	12
15 ~ 678.050 Mhz	7	12
16 ~ 678.800 Mhz	6	12